


HEATMISER NEOSTAT · QUICK START

YOUR THERMOSTAT, IN ONE PAGE.

For a system with the timer disabled — which is how most of ours are set up. Six symbols, and three things you will ever actually do. Stick this inside the manifold cupboard.

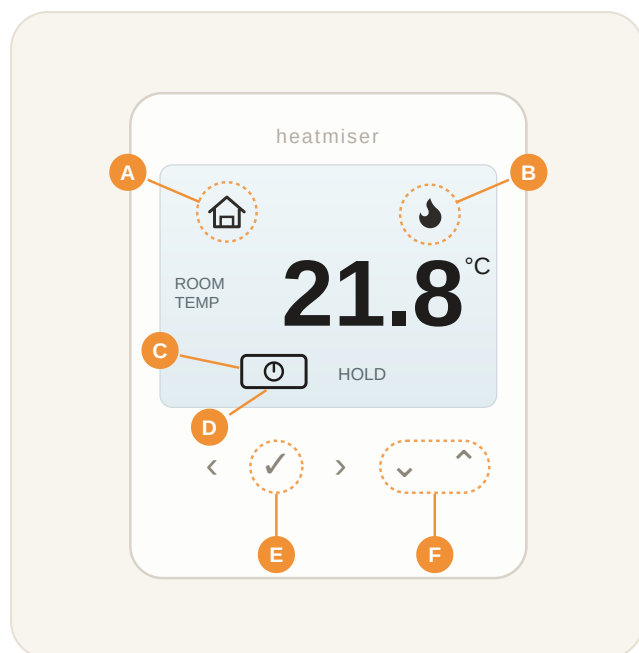

A THE HOUSE

When you can see the house, the heating is **off**.

B THE FLAME

The flame means the thermostat is **calling for heat** — the room is below the temperature you set. No flame just means the room is already up to temperature.

C THE RECTANGLE

This is the cursor. Whatever it is sitting over is what the tick will press.

D THE POWER SYMBOL

The on/off target. Put the rectangle over this one.

E THE TICK

Confirms. Nothing happens until you press it.

F THE ARROWS

Up and down — the temperature you want the room to sit at.

TURN THE HEATING ON

1. Make sure the **rectangle** is over the **power symbol**.
2. Press the **tick**. The **house** disappears.
3. If the **flame** lights up, it is calling for heat. No flame means the room is already warm enough — it will fire by itself as soon as the room drops below your setting.

SET THE TEMPERATURE

1. Make sure the **rectangle** is over the **power symbol**.
2. Use the **up and down arrows** to pick the temperature you want.
3. Press the **tick** to confirm.

TURN THE HEATING OFF

1. Make sure the **rectangle** is over the **power symbol**.
2. Press the **tick**. The **house** appears.

Set the **room** temperature you want, not the floor temperature — usually 20–22 °C in living areas and cooler in bedrooms. A slab takes hours to come up and hours to cool down, so a small overnight setback rather than switching it off is both cheaper and more comfortable than blasting it in bursts. If your system has the timer disabled, these instructions are the whole story.